



Pump Selection Guide

FAMILY CURVE FOR TVCP 3600 RPM

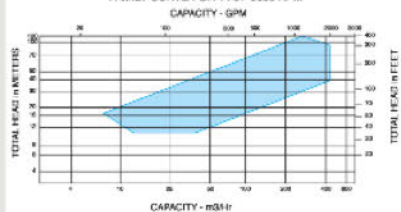


* Head is per stage

FAMILY CURVE FOR TVCP 1800 RPM

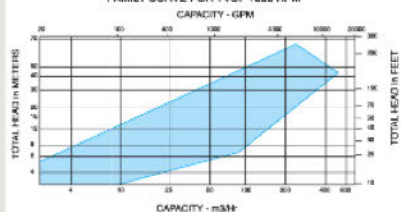


* Head is per stage

FAMILY CURVE FOR TVCP 1200 RPM

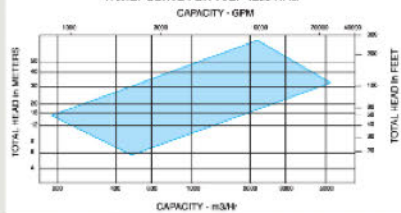

* Head is per stage

TVCP Series

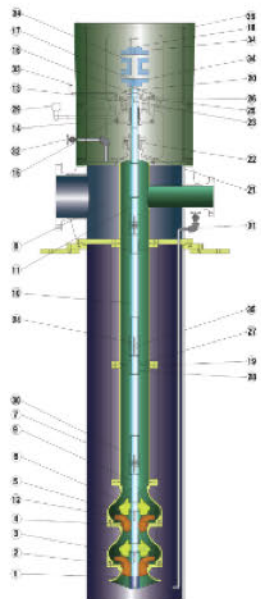

| NO. | PART NAME |
|-----|------------------------------|
| 1 | SUCTION BELL |
| 2 | CASE WEARING RING(FRONT) |
| 3 | CASE WEARING RING(BACK) |
| 4 | IMPELLER WEARING RING(FRONT) |
| 5 | IMPELLER WEARING RING(BACK) |
| 6 | BOWL |
| 7 | CAN |
| 8 | DISCHARGE HEAD |
| 9 | LOWER SHAFT |
| 10 | INTER SHAFT |
| 11 | UPPER SHAFT |
| 12 | IMPELLER |
| 13 | THRUST BEARING |
| 14 | LOWER ADAPTOR |
| 15 | BEARING HOUSING |
| 16 | BEARING COVER |
| 17 | COUPLING KEY(PUMP SIDE) |
| 18 | COUPLING KEY(MOTOR SIDE) |
| 19 | BEARING RETAINER |
| 20 | LABYRINTH OIL SEAL |
| 21 | STUFFING BOX |
| 22 | MECHANICAL SEAL ASSY |
| 23 | BEARING HOLDER KEY |
| 24 | INTER COUPLING KEY |
| 25 | THRUST BEARING HOLDER |
| 26 | THRUST BEARING HOLDER NUT |
| 27 | SLEEVE(RETAINER) |
| 28 | SLEEVE BEARING |
| 29 | CONSTANT LEVEL OILER |
| 30 | COLUMN PIPE |
| 31 | CASING DRAIN LINE |
| 32 | VENT |
| 33 | OIL CAP |
| 34 | COUPLING ASSY |
| 35 | INTER COUPLING UNIT |
| 36 | UPPER ADAPTOR |

Truflo Pumps, Inc.
7105 Cetina Drive
Greensboro, N.C. 27409
Ph (336) 664-9225
Fax (336) 664-1353
www.TRUFLO.com

API 610, 11th Ed. Process Pump (VS6)

API 610, 11th Ed. Process Pump (VS6)

TVCP Series

